 


Propellant Actuated Initiator - Page 1 of 1



:

When repair is beyond lower level maintenance capability, evacuate the item to depot. disposal is not authorized below wholesale level.