 


Aircraft Controller Grip Assembly - Page 1 of 1



□

When repair is beyond lower level maintenance capability, evacuate the item to depot. disposal is not authorized below wholesale level.