Radio Signal Distribution Panel - Page 1 of 1



View Online at https://aerobasegroup.kr/nsn/5820-01-544-7017

:		
:		
:		
:		
	helf Life:	
	l/a	
	Init Of Measure:	
	ea	
- 1	emilitarization:	
`	es - demil/mli	
	iig:	
-	122-c	
	lazmat:	
Ň	es	

## Repairability:

:

When repair is beyond lower level maintenance capability, evacuate the item to depot. disposal is not authorized below wholesale level.